



- Cut and remove end of existing mailbox even with the brick, stone, or stucco.

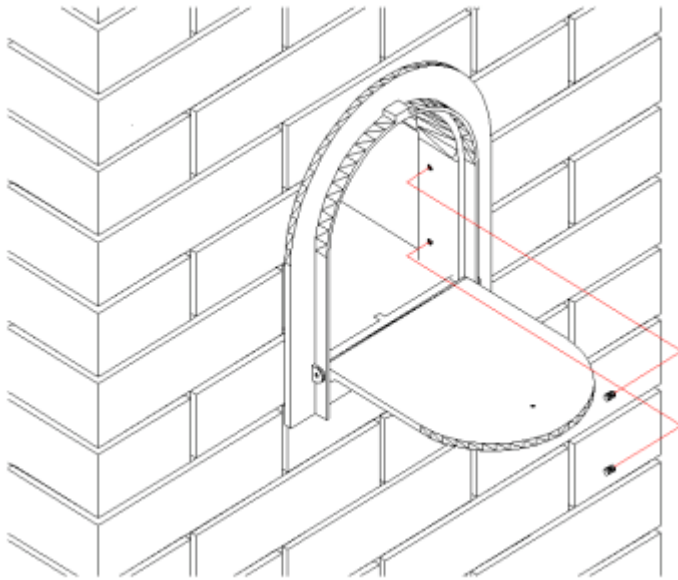

- After checking for proper fit apply 100% clear silicone to the back of the mailbox doorframe and structure then push into opening.

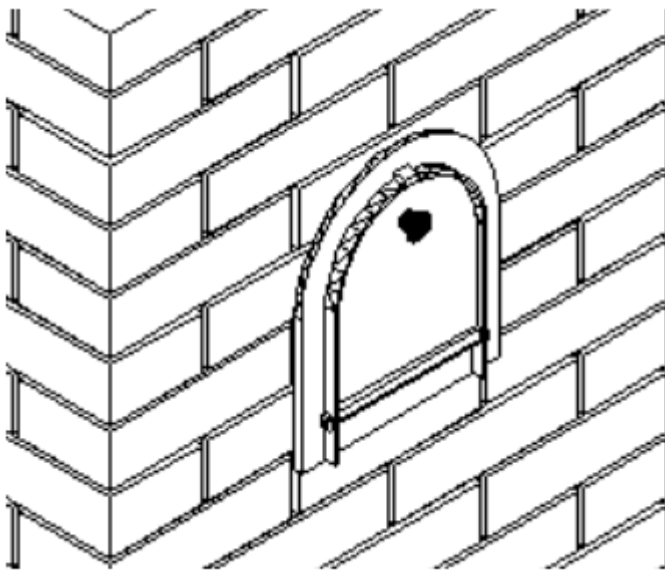

- After door has been installed tighten set screws inside the door frame.